




Flush installation instructions

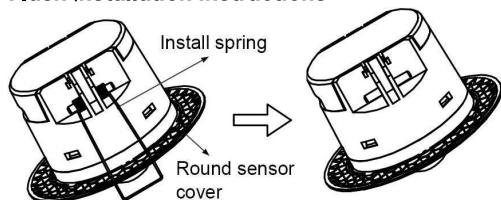


(1) Change the round sensor cover to the square, first to remove the springs on both sides.

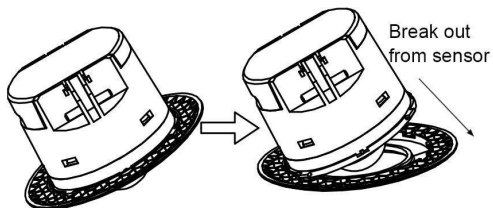


(2) Remove the round cover, hold your hand against the top of sensor and break out the round from sensor.

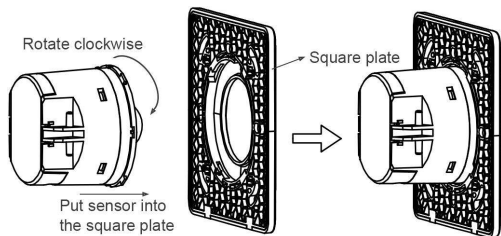


(3) Put the removed sensor into the square plate, then rotate clockwise until it can not move.

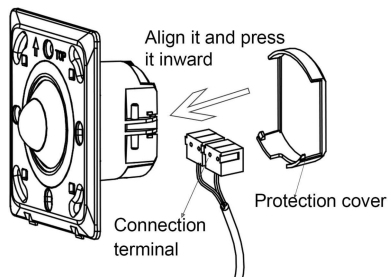

(4) Connect the connection terminal correctly according to the wiring instructions, then close the protection cover.

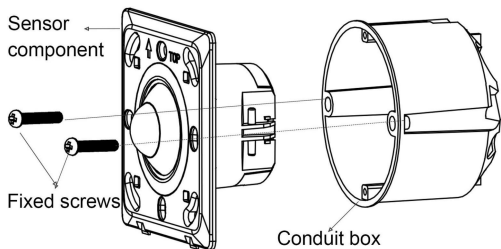


(5) Fix the sensor component to the conduit box with the screws.

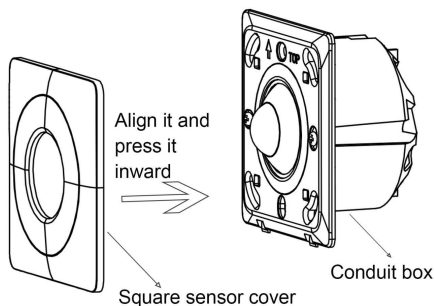


(6) Align the sensor with the round hole of the square cover, and pay attention to the alignment of the upper of the square cover and the plate, the upper direction is defined where marks with arrow and "TOP". Then press the cover inward, the installation is finished.


嵌入式安装说明

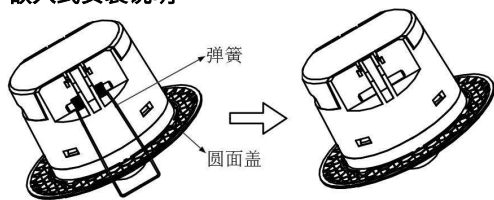


(1) 把圆面盖更换为方面盖，首先拆卸两侧弹簧。

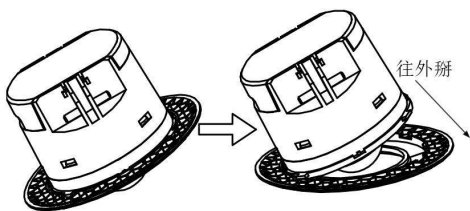


(2) 拆卸圆面盖，用手顶住前面用力掰出圆面盖。

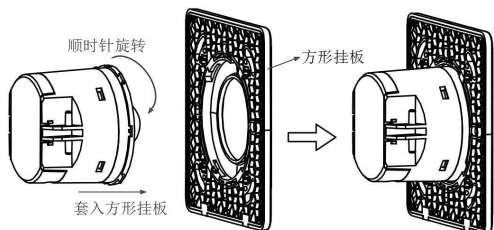


(3) 将拆卸出的传感器套入方形挂板，然后顺时针旋转至不动。

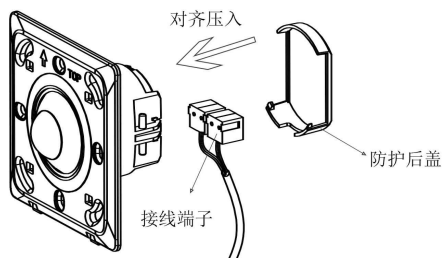

(4) 把接线端子按接线说明进行接线，然后盖上防护后盖。

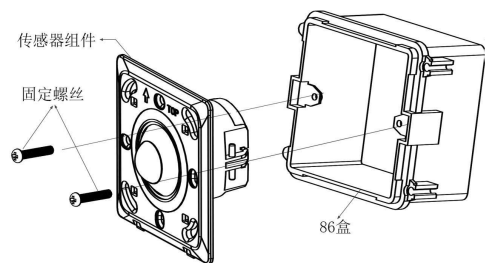

(5) 用螺丝将传感器组件锁上 86 接线盒。固定螺丝需采用我司配套的 M4 专用螺丝。

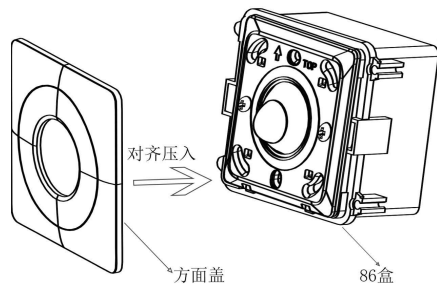

(6) 将传感器对准方面盖的圆孔，同时要注意面盖和挂板的上端对齐，标示向上箭头和 TOP 的为上端，然后用力将方面盖压入挂板，即可完成安装。